


Installation Steps

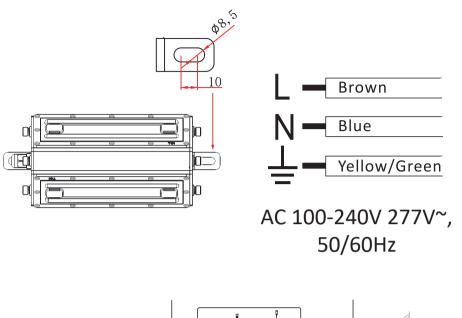

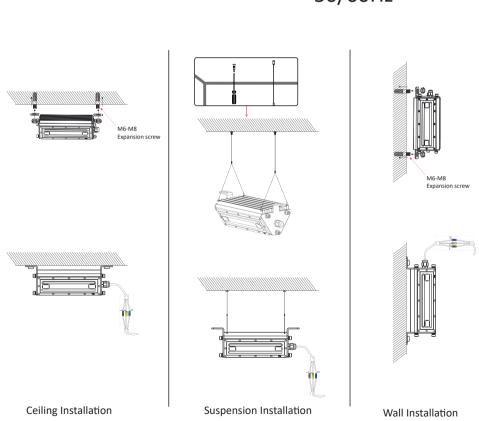

Installation Instructions

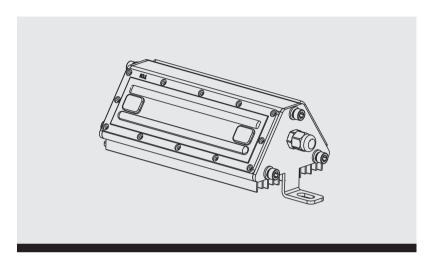

LED Bulkhead Light 30W/50W

Scope of Application

With unique high-brightness SMD chips,high-purity aluminium heats sinks, high-efficiency constant current and constant voltage power drivers, This bulkhead light is designed for public facilities and industrial.

Parameters

ССТ	2700-6500K	Power Factor	>0.95
Working Temperture	-40°C ~60°C	Working Life	50,000 hours
Beam Angle	Asymmetric G5	IP Grade	IP66
CRI	Ra>70/80	Lamp Size(mm)	250x107.4x84
LAMP LUMINOUS FLUX	150LM/W±5%	Input Voltage	AC 100-240V 277V~,50/60Hz

Trouble Shooting

- * Please don't disassemble light without being authorized stuff only.
- *Please report us the abnormality in time.

Problem	Possible Cause	Solutions	
LEDs stop working	The power line/plug is improperlu connected.	Reconnect the power cable/plug.	
	Power failure.	Check the Circuit.	
	Fault with LED Driver.	Replace with new drver.	
	Damage to LED chips.	Replace with new LEDs board.	
LEDs flash on and off	The output of the driver is abnormal.	Replace with new driver.	
	The LED chip breaks down.	Replace with new LED board.	
	Voltage Instability.	Power-off and check the power supply.	

Warning



Follow The Installation Instructins



Certified Installer



No Live Line Work



Power-Off In Accident



Use Original Parts



Use Waterproof Wiring



Not Suitable For Underwater Use



-40 °C ~60 °C Working Temperature



Keep Away From Chemical